


**Basic equipment:**


Paint funnel with sieve, line guides, charging cable for battery (electric battery)

**Equipment description:**

Spray line marking machine with electric pump system. The flow of marking paint for the Champ spray line marking machine is generated by an electric pump and automatically switches off when the operating lever is switched off. The generation of electricity occurs via an electric pump (12 V, 2.1 A), and has a flow rate of 2.6 l/min. The pump pressure is 4.8 bar. The pump is easy to operate via an ON/OFF switch on the handlebar. The spraying unit is positioned at the front in the user's field of vision and is simple to operate using a hand lever on the handlebar. The line width can be adjusted from 50 to 120 mm. The trolley has 2 plastic paint containers, each with a capacity of 13 litres. These can either be filled with 2 x 13 l of marking paint, or you can fill just one container with paint and fill the second container with water for cleaning the trolley after use. Each paint container has its own shut-off valve and can easily be removed from the frame for emptying or cleaning.

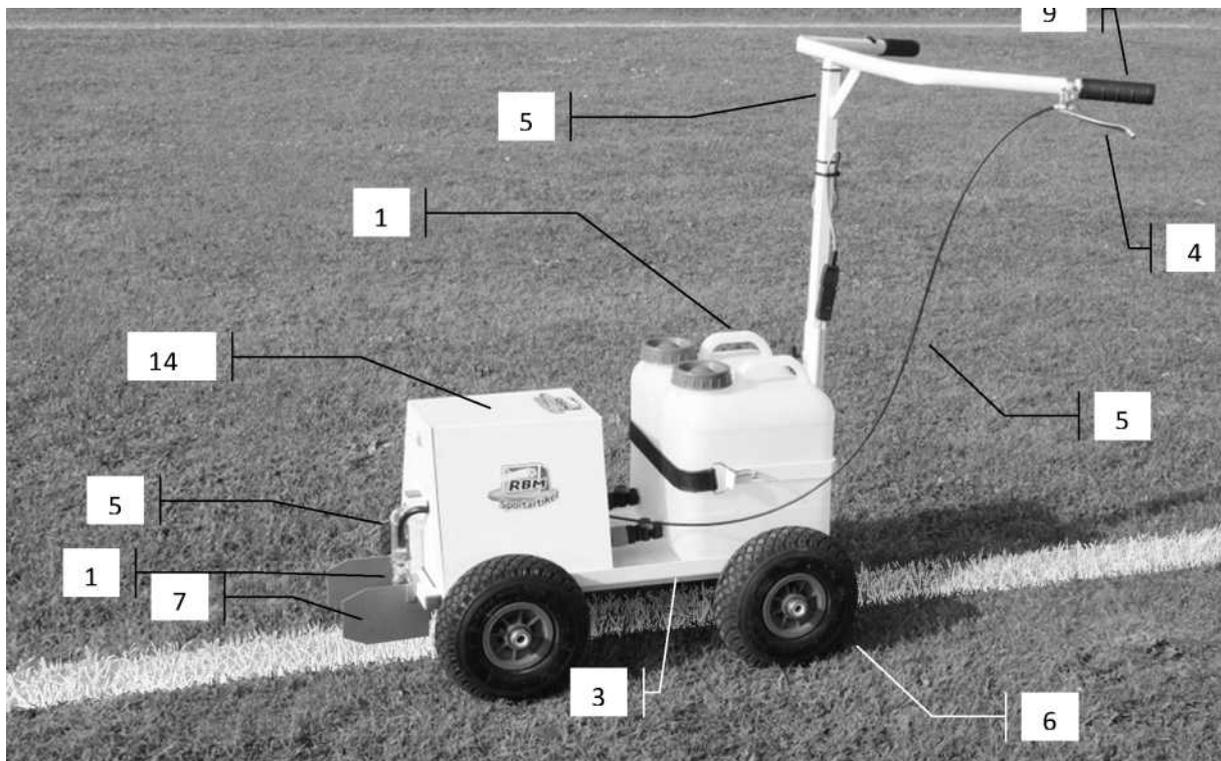

(1) Paint container, complete	60-3011	(14) Dirt cover	60-3018
(2) Handlebar	60-3012	(15) Ball-stopcock	60-1023
(3) Steel tubing frame	60-3013	(16) Quick coupling	60-1022
(4) Operating lever	60-3014		
(5) Cable pull with cover, complete	60-3015		
(6) Wheels	60-3016		
(7) Line guides, 1 set	60-3017		
(8) Quick-release valve	60-7047		
(9) Rubber handles	60-7064		
(10) Spray head, complete	60-7016		
(11) Pressure hose, complete	60-3023		
(12) Electric pump	60-3020		
(13) Rechargeable battery	60-3021		

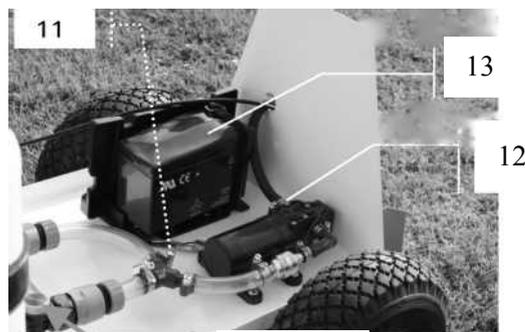


15, 16

## Assembly instructions:

When opening the equipment, first ensure that all the necessary parts are included. These include the **Champ spray line marking machine**, the **line guides**, the **paint funnel incl. filter**, the **dirt cover**, the **electric pump**, the **rechargeable battery** as well as the **charging cable**.

First, insert the handlebar (2) into the square frame (3), as illustrated, and attach this at the desired height using the wing nut. Connect the electric cable from the frame and bar. Next, open the screw lock on the paint containers and optionally, one container can now be filled with premixed marking paint and the other with water. Alternatively, fill both containers with marking paint: meaning that 26 litres of marking paint is then available to use. When the containers are full, reseal them using the screw lock. Leave the ball-stopcocks (16) + (17) closed, until you are at the required location with the piece of equipment. At the required location, open the stopcocks and operate the switch on the handlebar.

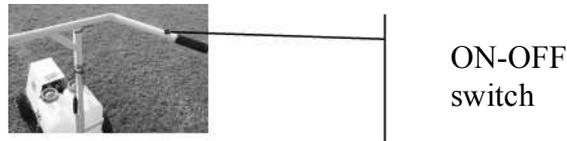

**Please read the included instructions on how to use and charge the batteries.**

**Note: charge the battery for at least 72 hours prior to initial use.**

### ***Please note:***

Only use original grass marking paints **without solvents**, as offered by several paint manufacturers. These paints are characterised by high opacity and luminosity as well as quick drying time. They are environmentally friendly as they do not contain any additives that can destroy grass or impede growth. **Do not, under any circumstances, fill the pump container with petrol, varnish or thinners. The pump is not suitable for spreading thinners, aggressive chemical products and petroleum products.**

### ***Guarantee exclusion***

**If the pump is to be stored away for a long period of time, the batteries must be removed and stored in a dry location!**

**If you do not intend on storing the piece of equipment in a frost-proof area during the winter months, all residual water must be removed from the containers, the hose lines and the quick-release valves, and the battery must be protected from frost!**

**Any warranty claims will be rejected in the event of non-compliance with this instruction manual.**

**Please keep this instruction manual with this piece of equipment!**