



BT2000/BTX6015/BT6015 COMPAK/ BT6015 pelota

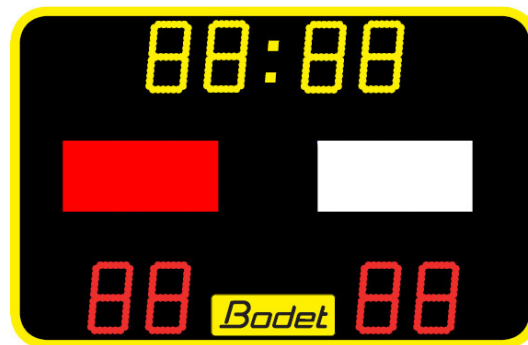

Pocket Keyboard

User manual

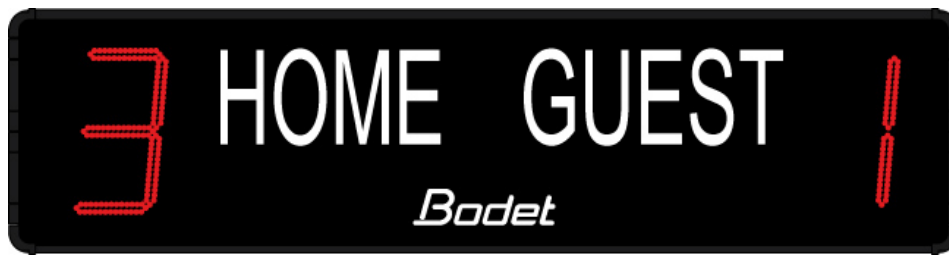

BP1
49340 TRÉMENTINES FRANCE
Tel. 02 41 71 72 00
Fax 02 41 71 72 02
www.bodet-sport.com




100% papier recyclé



Ref. 606959 F


Table of contents

1. How to switch on the keyboard ?.....	5
2. How to switch off the keyboard ?.....	5
3. How to start a match ?.....	5
4. How to change the parameters of a sport ?	5
5. Default parameters	6
6. How to start/stop the clock ?	6
7.How to add a point to the home or visiting team ?	6
8. How to deduct a point from the home or visiting team ?	6
9. How to sound the horn ?	6
10. How to stop the horn ?	6
11. How to start a new match ?	6
12. How to reset the clock ?	6
13. How to add/deduct seconds on the clock ?.....	7
14. How to switch from a match display to the time display ?	7
15. How to adjust the brightness of the scoreboard ?	7
16. How to change the time ?.....	7
17. Test mode	7
18. Technician menu.....	8

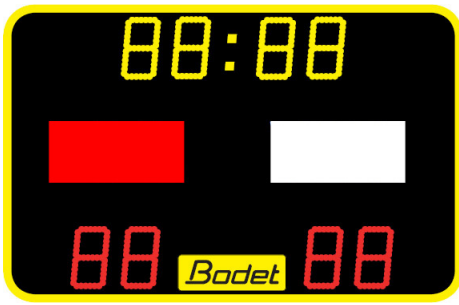

< Game Clock (minutes / seconds) or Time of Day Clock

< Home and Visitors score from 0 to 99

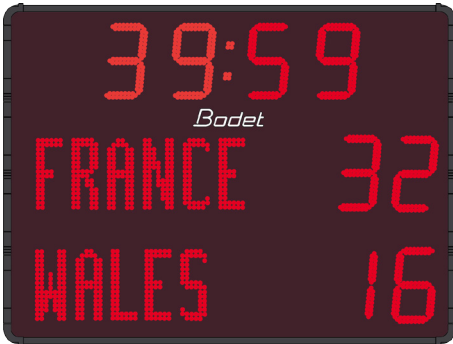


< Game Clock (minutes / seconds) or Time of Day Clock

< Programmable team/player name * and Home score from 0 to 99

< Programmable team/player name* and Visitors score from 0 to 99

BT2025 & BT2045 Alpha

Note: the Pocket keyboard does not manage programmable player or team names. In English, the scoreboard displays HOME and VISIT

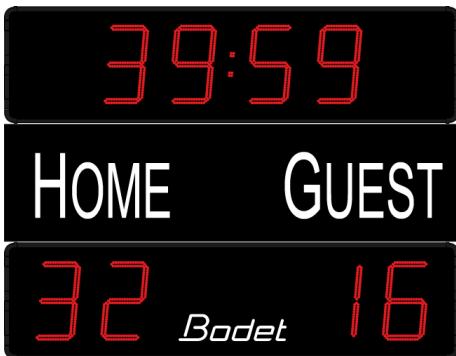

< Game Clock (minutes / seconds) or Time of Day Clock

< Home and Visitors score from 0 to 99

BT2025 & BT2045 Classic



< Game Clock (minutes / seconds) or Time of Day Clock

< Home and Visitors score from 0 to 99

BT2025 & BT2045 Club



< Home and Visitors score from 0 to 9

BT2025 & BT2045 Score



Key function	Index
Display time or stop keyboard	1
Start/stop clock or switch on keyboard	2
Adjust scoreboard brightness	3
Horn	4
Reset clock	5
Validate a parameter and start a new match	6
Next parameter or add a second in a match	7
Previous menu or deduct a minute in a match	8
Next menu or add a minute in a match	9
Previous parameter or deduct a second in a match	10
Add a point to the HOME / VISITORS score	11 and 11'
Deduct a point from the HOME / VISITORS score	12 and 12'

The Pocket and Alphascor keyboards **cannot** be used at the same time. If necessary, switch off the Alphascor keyboard.

1. How to switch on the keyboard ?

Press START/STOP (2) for 3 seconds.

2. How to switch off the keyboard ?

Press OFF (1) (with the clock stopped) for 3 seconds.

3. How to start a match ?

On start-up, select a type of match (P1 to P9) with the ◀ key (8) and the ▶ key (9). Validate by pressing OK (6). The match is ready to be started.

Programs P1 to P8 are all programmable, P9 is dedicated to pelota.

Note: there are no programmable programs for the BT2025 and BT2045 SCORE models; the match is ready as soon as the board is switched on.

4. How to change the parameters of a sport ?

Press the ◀ key (8) and the ▶ key (9) at the same time for 3 seconds during a match (with the clock stopped). Navigate in the menus with the ◀ key (8) and the ▶ key (9) and modify the values with the + key (7) or the - key (10).

Validate by pressing OK (6).

For programs P1 to P8 :



Duration of the period(1 to 99).



Number of periods (1 to 99).



Game clock count-up (UP) / count-down (do) mode.



Cumulative period Yes (y) or No (n). (for example, if you select Yes in a match comprising 2 periods of 45 minutes, the second period will begin at 45 and be counted up to 90, whereas if you select No the second period will begin at 0 and be counted up to 45). Also concerns extra time periods which may be accumulated independently from normal playing time.



Length of extra-time period (1 to 99). (Et = Extra time).



Number of extra-time periods (1 to 99).



to: Time-out duration (0 to 60 sec).



nt: number of time-outs



Local time and score display Yes (y) or No (n) instead of game clock and score.



Hn: Horn enabled (y) yes or (n) no



nS: total number of points in the match (1 to 99).

nS = 0 no management of the score max.

nS different from 0, the game clock stops when a team's score reaches the value programmed in nS, the clock can be restarted.

For program P9 dedicated to pelota :



nP: total number of points in the match (1 to 99)

5. Default parameters

The default parameter settings of each program P1 to P9 are as follows :

	P1	P2	P3	P4	P5	P6	P7	P8	P9
tP Period length	45	40	20	40	35	30	45	10	-
nP Number of periods	2	2	2	2	2	2	2	1	50
Co Count-up / Count-down	UP	UP	UP	UP	UP	UP	UP	UP	UP
CP Cumulative period	n	n	n	n	n	n	n	n	-
Et ET period length	15	15	15	10	10	10	15	15	-
nE Number of ET periods	2	2	2	2	2	2	2	0	-
t0 Time-outs	0	0	0	0	0	0	30	30	-
Hn Horn activation	y	y	y	y	y	y	y	y	-
hS Time + score	n	n	n	n	n	n	n	n	y
nt Nber of Time-outs	0	0	0	0	0	0	1	1	-
nS Score max.	0	0	0	0	0	0	0	21	-

To reset all the default parameters, switch to time mode by pressing OFF (2).

Press the + key (7) and the - key (10) at the same time for 3 seconds.

Select Yes (y) or No (n) with the + (7) and - (10) keys.

Validate by pressing OK (6).

6. How to start/stop the clock ?

During a match, press START/STOP (2) to start the clock; press again to stop it.

7. How to add a point to the home or visiting team ?

Press the HOME + key (11) or the VISITORS + key (11').

8. How to deduct a point from the home or visiting team ?

Press the HOME - key (12) or the VISITORS - key (12').

9. How to sound the horn ?

Press the horn key (4).

10. How to stop the horn ?

Press the horn key (4) while it is being sounded.

11. How to start a new match ?

Press the OK key (6) for 3 seconds.

12. How to reset the clock ?

Press the RESET key (5) for 3 seconds; the clock goes to the start of the period.

13. How to add/deduct seconds on the clock ?

With the clock stopped, press the + key (7) for 3 seconds; the readout flashes.

Use the + key (7) and the - key (10) to adjust the seconds within the limit of the period.

Validate by pressing OK (6).

14. How to switch from a match display to the time display ?

During a match and with the clock stopped, press the OFF key (1); the board displays the time.

When the time is displayed, you can press the OFF key (1) to display the match.

15. How to adjust the brightness of the scoreboard ?

Press the light bulb key (3). The brightness is adjusted each time you press the key.

16. How to change the time ?

To display the time, press the OFF key (2).

Press the ◀ key (8) and the ▶ key (9) at the same time; the minutes flash.

Adjust the minutes with the + key (7) and the - key (10).

Press the ◀ key (8) or the ▶ key (9); the hours flash.

Adjust the hours with the + key (7) and the - key (10).

Validate by pressing OK (6).

17. Test mode

Switch to time mode by pressing the OFF key (2).

Press the RESET key (5) for 3 seconds.

Test mode is executed in the following order.

1/ Display of program version number.

2/ Display of ribbon cable number.

3/ Display of address of each module.

4/ Display completely lit.

5/ Board switched off.

6/ Display of keyboard channel number.

7/ Return to normal mode.

18. Technician menu

To enter the technician menu, press the + key (7) and the - key (10) at the same time for 3 seconds.

Select the parameters with the + key (7) and the - key (10).

Validate by pressing OK (6).

dF: if yes (y), restore the default factory settings.

Ec: if yes (y), the scoreboard display will be blank when not used (Eco mode).

if no (n), the scoreboard will display time when not used.

LA: choice of language among F (French), Gb (English), D (German), E (Spanish) and Da (Danish).

By changing the language, you change the texts on the scoreboard: Loc / Visit in French, Home / Visit in English...